


# Instructions For Use

## S4® Safety Carton Cutter

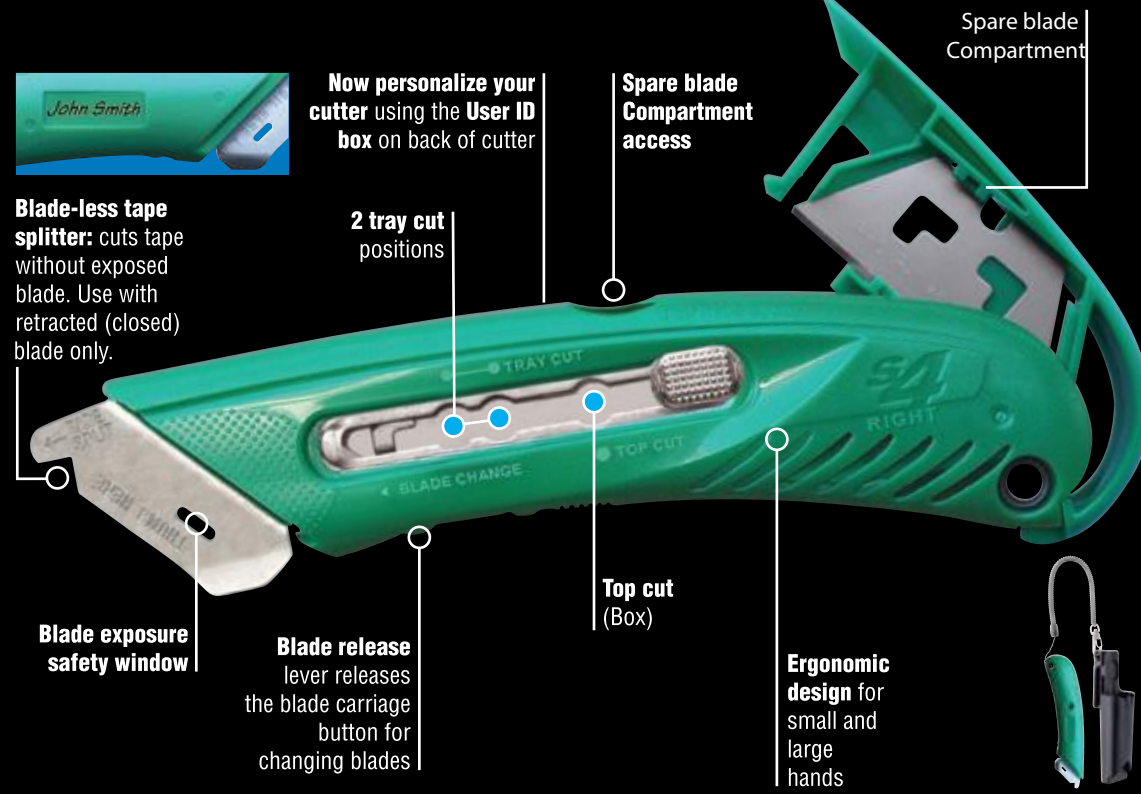


### Blade Change

Using the S4® single-notch blade (SP0-17)



**Press blade release lever** and push blade carriage button forward.

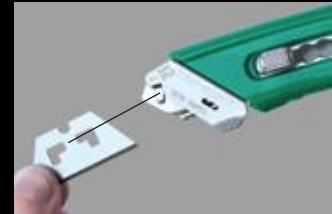

**Lift blade off alignment tab. Reload** using alignment tab to position blade.



**To Remove blades** from blade storage compartment press from behind with index finger and slide blades forward and out with thumb.

UKH-423 Safety Holster  
CL-36-Coiled Lanyard Available

## Features & Functions



**Tape Cut**



**Top Cut**



**Tray Cut / Window Cut**



**S4L - Left-handed Safety Cutter**



**S4R - Right-handed Safety Cutter**

For more information, please contact

**Safetyware Sdn. Bhd.** (632971-X)  
info@safetyware.com  
www.safetyware.com

Penang : +604-5023 882 (8 Lines)  
Melaka : +606-3363 882 (2 Lines)  
Johor : +607-3576 882 (3 Lines)  
Kuala Lumpur : +603-6262 0882 (4 Lines)  
Singapore : +65 6744 0882



**Working Safe Everyday.®**