




# IMPORTANT

## Inspection and maintenance of the battery gasket for SR 500 EX

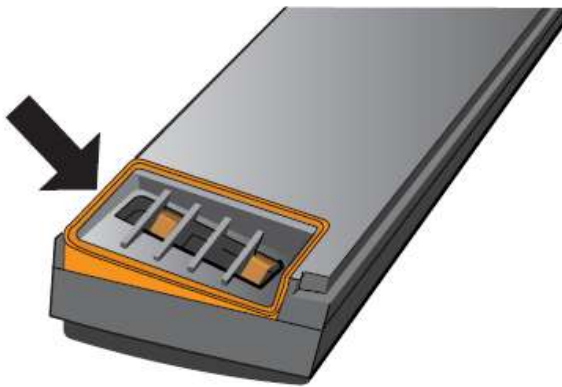


### Inspection of battery gasket

**Before every use:**

Check that the battery gasket is intact.

See also *Instructions for use* section 4.3 *Maintenance schedule*.

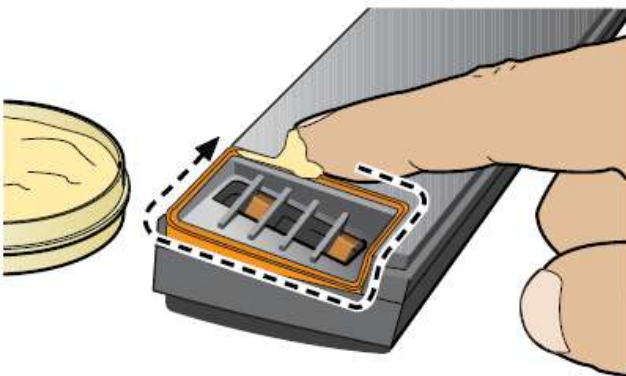

### Lubrication of battery gasket

**To extend the life of the battery gasket:**

Keep the gasket clean and lube it with Vaseline weekly.

See also *Instructions for use* section 2.5 *Assembly*.

**Safetyware**  
SAFETYWARE GROUP  
*Responsibility & Care*

For more information:  
Email : [Info@safetyware.com](mailto:Info@safetyware.com)  
[www.safetyware.com](http://www.safetyware.com)