


# Instructions For Use

**AMBIDEXTROUS - For Right & Left Handed Users**

## S8™ Safety Cutter

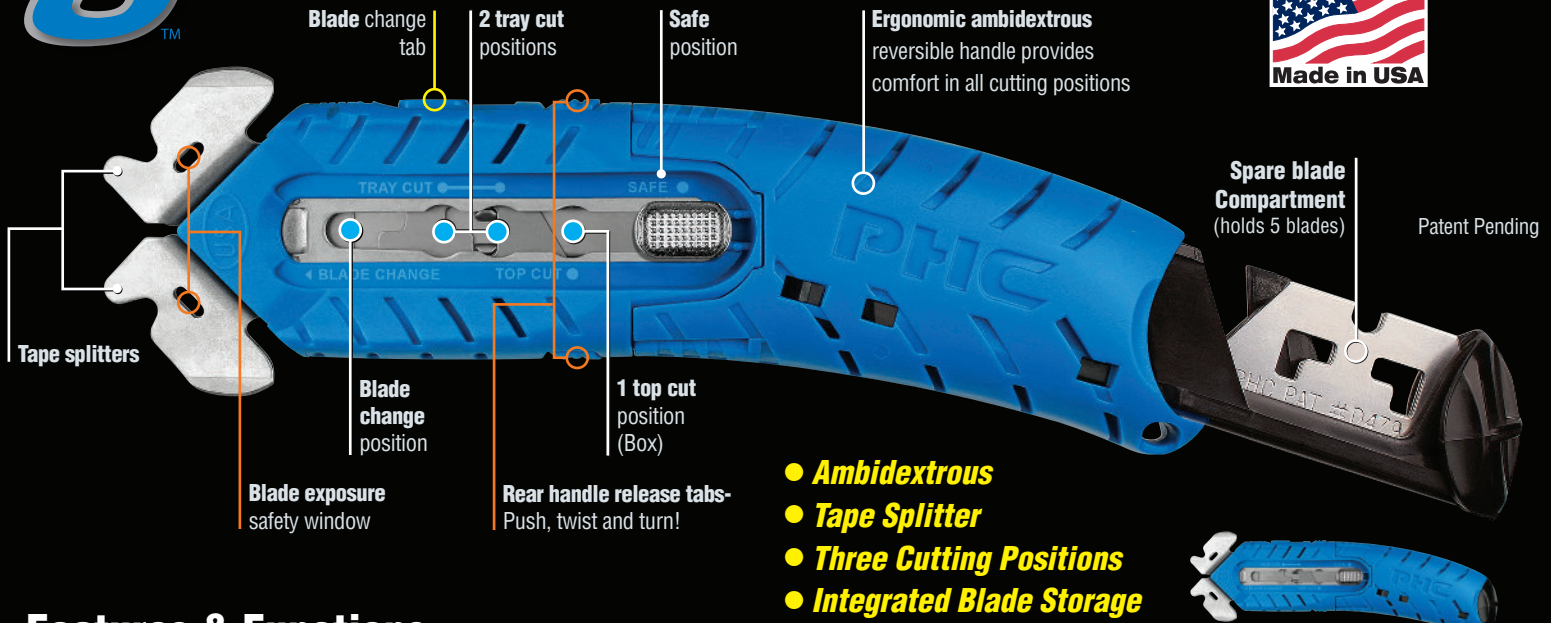

- **Ambidextrous**
- **Tape Splitter**
- **Three Cutting Positions**
- **Integrated Blade Storage**


### Features & Functions



**Tape Cut**




**Top Cut**

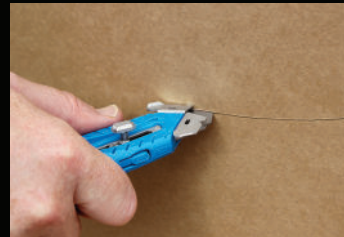

**Tray Cut / Window Cut**


### Blade Change

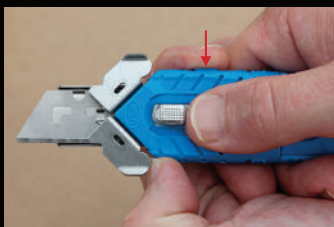

**While depressing blade change tab** slide button forward into the blade change position and remove blade.



**Grasp both sides** of the black spare blade compartment and pull back until it locks into place. Remove left most blade. Close spare blade compartment.

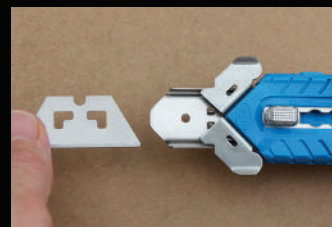


**Align and place** new blade on the index. Slide button back to the safe position.

### Customizing Your S8 For Right Or Left Handed Users



**Squeeze release tabs** and pull the handles apart.

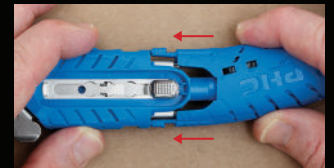

**Rotate 180 degrees** and snap the handle back into the body to close.



**Reverse blade orientation** by going into the blade change position and turn blade over.



**For Information Call: (800) 229-2233**  
**Email: [info@go-phc.com](mailto:info@go-phc.com)**  
**[www.go-phc.com](http://www.go-phc.com)**



Use only S Series replacement blades:  
# SP-017, SPD-017 or PBDSP017B



UKH-594 Safety Holster, CL-36 Coiled Lanyard Available



**PHC**  
PACIFIC HANDY CUTTER®

**Working Safe Everyday.®**