


Instructions For Use

AMBIDEXTROUS - For Right & Left Handed Users



Features & Functions

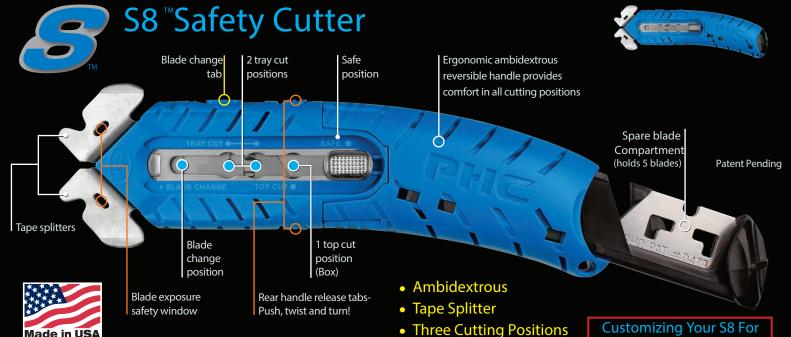

Tape Cut

Made in USA



Top Cut



Integrated Blade Storage

Tray Cut / Window Cut

Blade Change



While depressing blade change tab slide button forward into the blade change position and remove blade.



Grasp both sides of the black spare blade compartment and pull back until it locks into place. Remove left most blade. Close spare blade compartment.



Align and place new blade on the index. Slide button back to the safe position.



Use only S Series replacement blades: # SP-O17, SPD-017 or PBDSP017B

Customizing Your S8 For Right Or Left Handed Users



Squeeze release tabs and pull the handles apart.



Rotate 180 degrees and snap the handle back into the body to close.



Reverse blade orientation by going into the blade change position and turn blade over.

UKH-594 Safety Holster, CL-36 Coiled Lanyard Available

For more information, please contact

Safetyware Sdn. Bhd. (632971-X) info@safetyware.com www.safetyware.com

Penang: +604-5023 882 (8 Lines) Melaka: +606-3363 882 (2 Lines) Johor: +607-3576 882 (3 Lines) Kuala Lumpur: +603-6262 0882 (4 Lines)

Singapore: +65 6744 0882



