



DISPENSER USER INSTRUCTION FOR SET UP AND FILLING OF EARPLUGS

STEP 1.

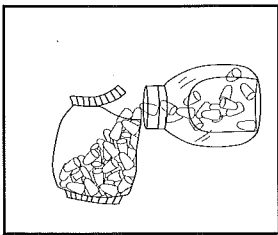


Unscrew the lid on the clear container and fill with contents of 500 pairs of disposable earplugs from refill bag.

STEP 2.

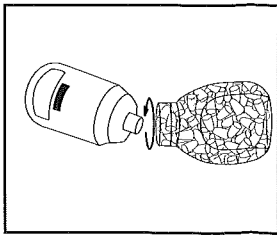


Invert the base unit and line up to the opening of the container, screw it together until firmly connected & closed.

STEP 3.

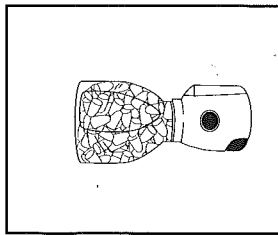

Turn the complete connected dispenser back and place firmly in position (or hanging on the wall and please refer to Screwing Instruction).

STEP 4.

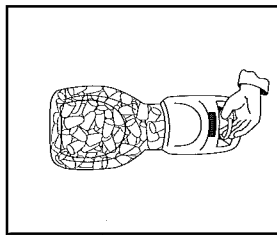

Rotating the revolver which on the side of base unit to access earplugs.

Screwing Instruction

1. Drilling four holes on the wall (please refer *Drawing A* for actual position "distance 6.5 cm").
2. Insert plastic anchor into the holes of the wall in order to fix the screws.
3. Remains half screws project from the surface of wall.
4. Hanging dispenser on the wall.

Drawing A

